RadioShack

User's Guide **63-255**

4-Alarm Talking Watch

*Thank you for purchasing your 4-Alarm Talking Watch from **RadioShack**. Please read this user's guide before installing, setting up, and using your new talking watch.*

Package contents

Talking Watch

Button-Cell Battery (Installed)

Features

- Date and time announcement with a touch of a button
- Hourly time announcement from 6:00 AM till 10:00 PM
- Talking stopwatch that keeps track of lap times
- Four daily alarms to remind you of important events throughout the day

MODE
Select the time, stopwatch, and each of four alarm modes.

ADJ
Turn the hourly report on or off.

TALKING
Hear the current time, elapsed stopwatch time, or alarm time while in each mode.

SET
Press to hear the date. Press again to view the year.

Day of the Week **Alarm – 4 on**

Clock Time
12hr format

Hourly Report On

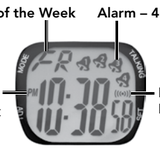

Set Date and Time

1. Press **MODE** until the watch announces and displays the time.
2. Hold down **SET** until the watch announces "time set" and "hour set," and the hour digits flash.
3. Press **ADJ** to move through the digits. Hold down to move quickly.
4. Press **SET** to confirm and go to the next setting.
5. Repeat Steps 3 and 4 to set the minute, year, month, and date.
6. Press **MODE** when finished.

Notes:

- *Remove the plastic film on the display before use.*
- *The calendar extends from 1990 to 2090.*
- *If you do not press a key for more than one minute, the watch returns to the current time display.*
- *After setting the date, the watch automatically sets the day of week.*

Voice Announcements

To hear the current time:

Press **TALKING**.

Example:

"It is ten thirty-eight PM."

To hear the date:

Press **SET**. The date appears on the display.

Example:

"Today is the twenty-third"

Month **Date**

Notes:

- *The month is not announced.*
- *To display the current year, press **SET** again.*

Turn Hourly Time Announcements On and Off

Press **ADJ** in time mode.

When hourly report turns on, the watch announces "hourly report on," and displays.

When hourly report turns off, the watch announces "hourly report off," and disappears.

***Note:** The hourly time announcement sounds at the beginning of each hour from 6:00AM till 10:00PM.*

Set Alarm

You can set up to four daily alarms.

To set alarm time:

1. Press **MODE** until the watch announces and displays the number of the alarm you want to set.
2. Hold down **SET** until the watch announces the selected alarm (for example, "alarm 1 set") and "hour set." The hour digits flash.
3. Press **ADJ** to set the alarm hour.
4. Press **SET** to store the hour.
5. Repeat Step 3 to set the minute.
6. Press **MODE** when finished.
7. Press **ADJ** to turn alarm on.
8. Press **MODE** to select other alarms or return to the time.

Alarm 1 set

***Note:** If you do not press a key within 30 seconds of turning on the alarm, the watch beeps twice and displays the current time.*

At the alarm time, the watch announces the time, then beeps for one minute.

To silence the alarm sooner, press any key.

To turn alarm on or off:

1. Press **MODE** until the watch displays and announces the desired alarm.
2. Press **ADJ** to turn alarm on and off.

   When you turn an alarm on, the corresponding icon displays and your watch announces that the selected alarm is on.

   For example, when alarm 1 is on, your watch announces "alarm one on" and displays.

When you turn an alarm off, the corresponding icon disappears and your watch announces that the selected alarm is off.

3. Press **MODE** to select other alarms or return to time display.

Use the Stopwatch

The stopwatch counts elapsed time up to 23 hours, 59 minutes and 59 seconds.

When the stopwatch reaches 23:59 59, it resets to 0:00 00, and begins counting up again.

1. Press **MODE** until the watch announces "stopwatch."
2. Press **ADJ** to start the stopwatch. The stopwatch announces the elapsed time as listed on Page 9.

Elapsed Time	Announcement
1 to 10 seconds	Each second
11 seconds to 1 minute	Every 10 seconds
1 to 10 minutes	Every minutes
10 minutes to 24 hours	Every 10 minutes

3. Press **ADJ** to stop counting.
4. Press **ADJ** again to continue counting.

Note: *While the stopwatch is running, press **MODE** to use the watch's other features, or press **TALKING** to hear the voice announcement.*

Record Lap Times

The watch's lap function lets you freeze the display, document the timed reading, then return to the stopwatch to see the advancing time. You can monitor as many laps as you want as long as the stopwatch continues to run.

1. Follow Steps 1 and 2 under "**Use the Stopwatch**."
2. When the first lap is finished, press **SET**. The stopwatch display freezes, but the stopwatch continues to run in the background. **:** flashes.

3. When you have documented the lap time, press **SET**. The display changes to show the advancing time.
4. Repeat Steps 2-3 for each additional lap.

Reset Stopwatch to 0:00 00

- *If the stopwatch is not counting (**:** not flashing), press **SET**.*
- *If the stopwatch is counting time, press **ADJ** then **SET**. The watch announces "all clear."*
- *If the stopwatch is in lap mode (**:** is flashing but digits not changing), press **ADJ** then **SET** twice.*

Replace Battery

Your watch comes with one CR2016 lithium battery installed. When the display dims or the watch stops operating properly, replace the battery.

1. Use a Phillips jeweler's screwdriver to remove the screws from the battery cover.
2. Remove the battery cover and sticker.
3. Remove the battery holder by loosening two screws.
4. Remove the old battery and install a new battery with the positive (+) side up.
5. Replace the battery holder and secure it with screws.
6. Replace the sticker and the battery cover.
7. Secure the battery cover with four screws.

Notes:

- *The watch resets when you finish replacing the battery.*
- *Do not lose small parts such as screws.*

Battery Notes

- Dispose of battery promptly and properly. Do not burn or bury it.
- Use only a fresh battery of the required size and type.
- If you do not plan to use the watch for a long time, remove the battery. Batteries can leak chemicals that can damage electronic parts.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

Specifications

Power source .....CR2016 lithium battery
Accuracy ..... ±0.67 seconds/day
Current drain .....Less than 5µA
Weight (including battery) ..... 1.13 oz. (32 g)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **one (1) year** after the date of purchase from a ***RadioShack***-owned store or an authorized ***RadioShack*** franchisee or dealer. ***RADIOSHACK*** MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a ***RadioShack*** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the ***RadioShack*** sales receipt as proof of purchase date to any ***RadioShack*** store in the U.S. ***RadioShack*** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of ***RadioShack***. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, ***RADIOSHACK*** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED

TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF ***RADIOSHACK*** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact ***RadioShack*** at:
RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102 04/08

Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

www.RadioShack.com

©2009. ***RadioShack*** Corporation.
All rights reserved. ***RadioShack*** and ***RadioShack.com*** are trademarks used by ***RadioShack*** Corporation.

Printed in China 04A09 63-255